


- 1.** Unscrew both nuts. Separate both halves of dimmer.

CAUTION

Do NOT lift inside fiber which holds spring contacts to permit switching

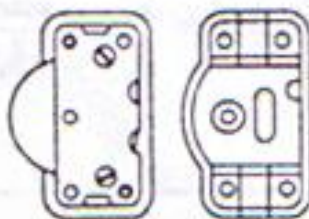

- 2.** Where dimmer is to be located on lamp cord, slit along center of insulation — about 5/8"

CAUTION

DO NOT STRIP INSULATION FROM WIRE



- 3.** Cut smooth, non-ribbed lead near end of slit.




- 4.** Nest lamp cord into hollow half of dimmer — as shown.



No. 1419

- 5.** Fit both halves of dimmer together. Squeeze together so that KWIK-WIRE™ CONTACTS pierce insulation. Replace both nuts. Tighten screws.

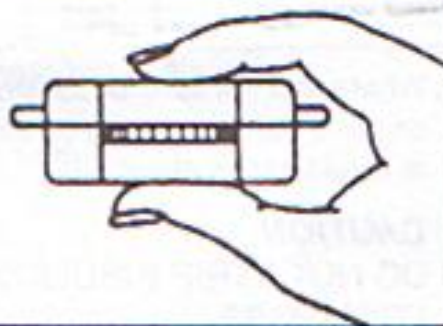

Assembled in México.